

Please adjust the bottom chip to the optimal position to keep the chair stable in even level.

